




1. Insert upper and lower bow piece into coupler and lay flat on ground.

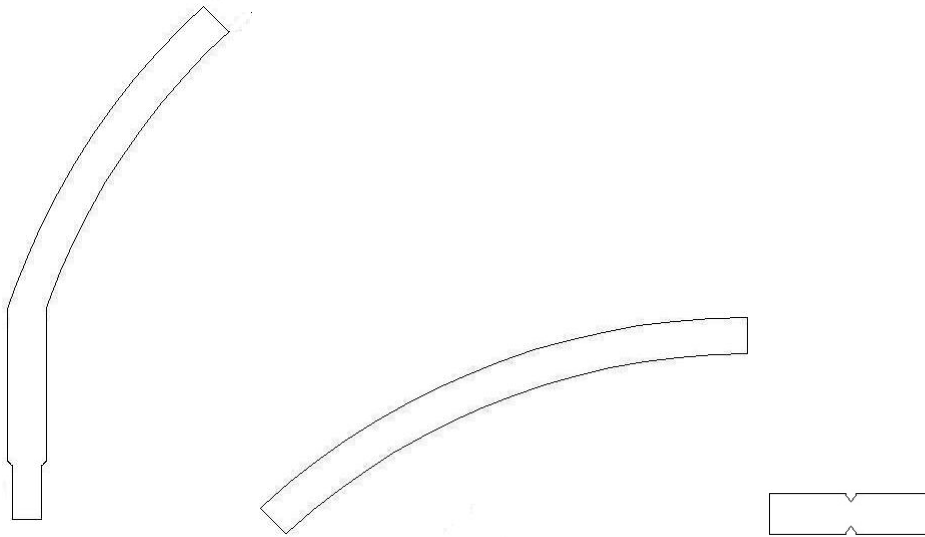

2. Using 1" self-tapping screws, attach upper and lower bow with coupler.

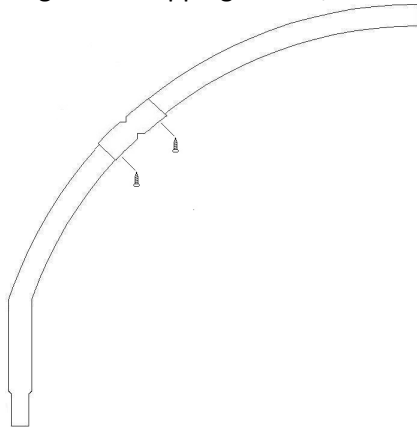

3. Repeat for remaining bow halves
4. Take 2 bow halves, insert into coupler and lay flat on ground
5. Using 1" self-tapping screws, attach bow halves with coupler

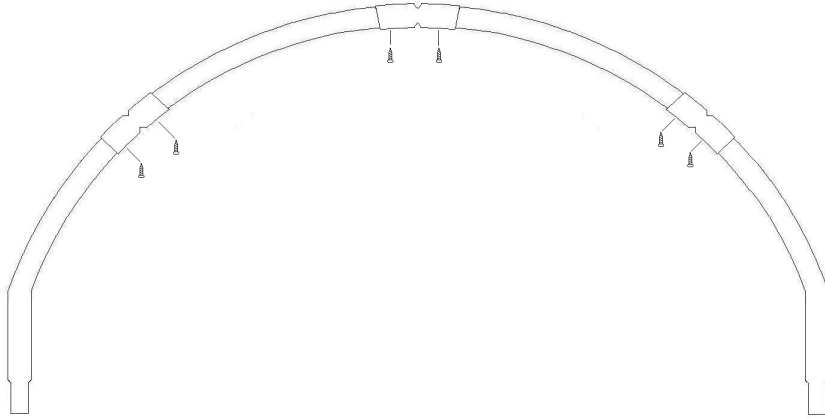

6. Repeat for remaining bows